



# 2.5" QB-Bracket

## Installation Guide


1. Take a handle out of the enclosure and position it facing backwards to assemble a SSD or HDD into it.

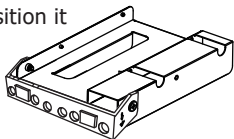

2. Make sure the HDD pins are facing upwards. One end is being embedded with two pins of the bracket and the other is being secured by two screws with attached screw driver.

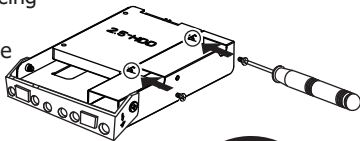


3. Turn the bracket upside down.

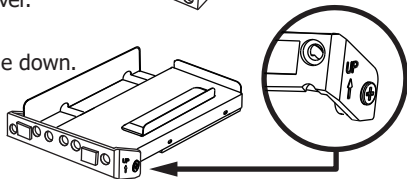


4. Insert the bracket assembled with the HDD/SSD as shown in step 2 & step 3 back into the enclosure.
5. Close door and it's ready for use.

## Other Devices

1. Insert the HDD and the bracket into the PC.

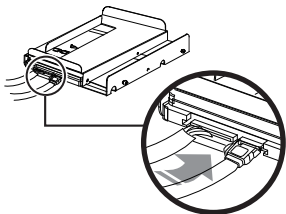


2. Fasten it into the PC with the 3 black screws.

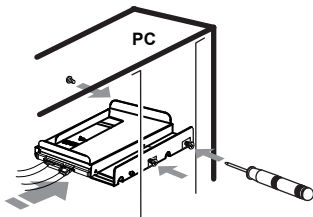


# 2.5" QB-Bracket

## Anleitung


1. Nehmen Sie einen Griff aus dem Gehäuse und drehen sie ihn um um eine SSD oder HDD zu montieren.

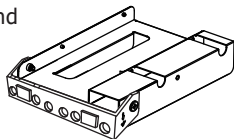

2. Stellen Sie sicher, dass die Festplattenpins nach oben gerichtet sind und ein Ende mit beiden Rahmenpins und das andere mit beiden Schrauben mithilfe des Schraubenziehers gesichert wird.

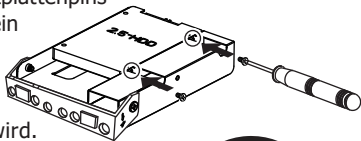

3. Drehen Sie den Einbaurahmen um.

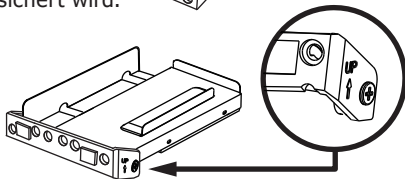

4. Fügen Sie den Einbaurahmen mit der HDD/SSD eingefügt wie in Schritt 2 & 3 beschrieben wieder in das Gehäuse ein.

5. Schließen Sie die Klappe des Gehäuses und es ist bereit für die Nutzung.

## Andere Geräte

1. Fügen Sie die HDD/SSD mit dem Einbaurahmen in den PC.

2. Schrauben sie es mit den 3 schwarzen Schrauben fest.

