



ECO HARDSHELL CASE

FOR MACBOOK PRO 2021

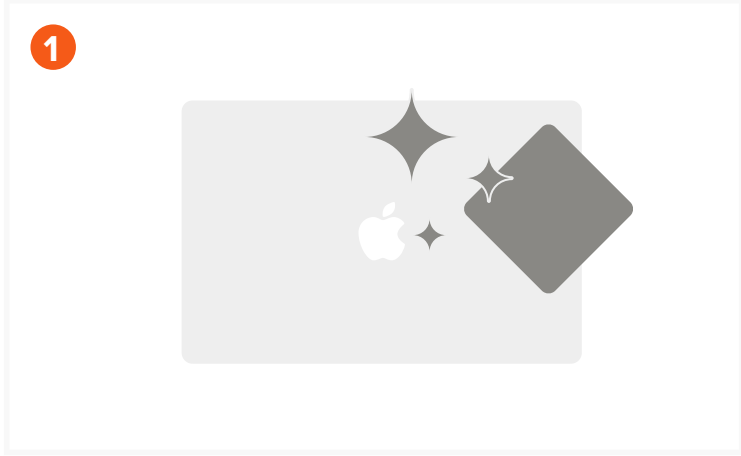


1 Before installing the Eco Hardshell Case, please properly clean your computer.

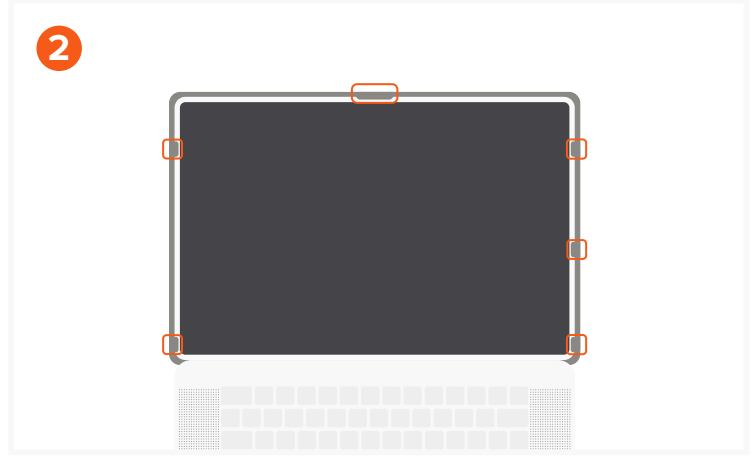


2 When installing the top case, ensure all **6 clips** snap into place.



3 If installed correctly, the logo should be on the bottom right.

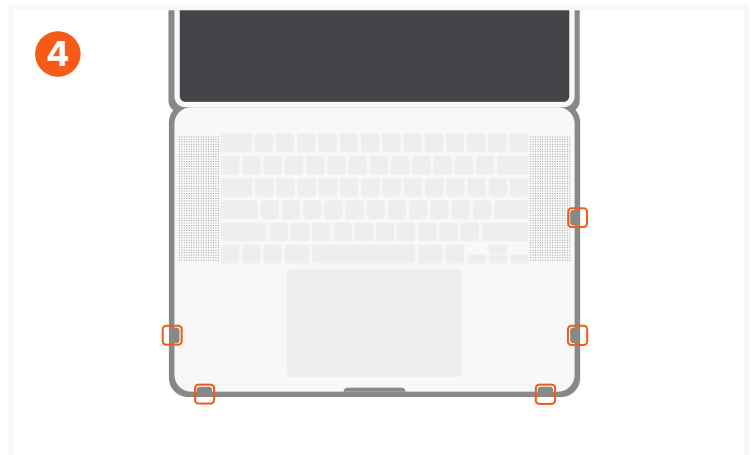

4 When installing the bottom case, ensure all **5 clips** snap into place.

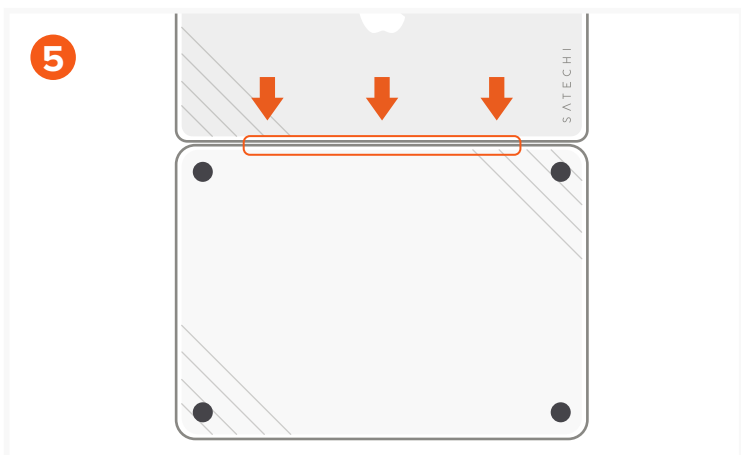

5 Ensure this long clip snaps into place as well. If it does not snap into place, the case will fall off.



6 Ensure the vents are properly aligned.